

JTSE-1QA 100/120V


JTSE-2QA 230V

HOT AIR STATION
WITHOUT EXTRACTOR DESK


SPARE PARTS	
JTSE-1A / JTSE-2A:	
-ENCLOSURES:	
·TOP	0011035
·BOTTOM	0013486
·FRONT	0016862
·BACK	0016812
JTSE-1A:	
-CIRCUIT	0017185
-SUCTION PUMP	0008723
-HOT AIR PUMP	0015970
JTSE-2A:	
-CIRCUIT	0017671
-SUCTION PUMP	0008722
-HOT AIR PUMP	0015970

JTSE-1A 100/120V FUSE T-8A
JTSE-2A 230V FUSE T-4A


JTSE-1A / JTSE-2A

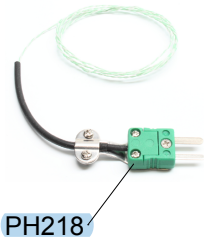


PH218

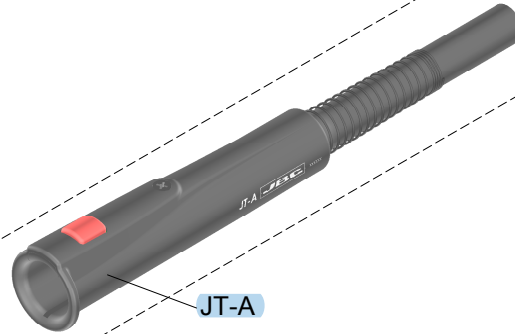

JT-A

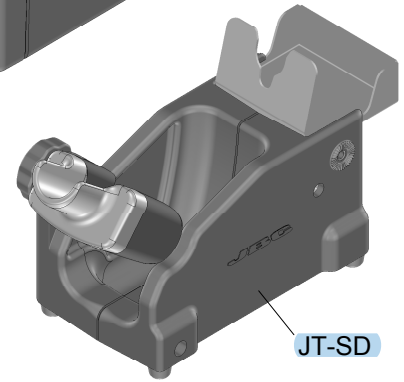

JT-SD

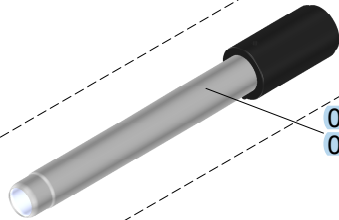

0014107 (230V)
0014105 (100V, 120V)


JT-T2A (230V)
JT-T1A (100V, 120V)



JN2020



 JN2012



JN2015