



Thermal Tweezers

Ref. HT420-A

Packing list


The following items should be included:

Manual 1 uni






Features

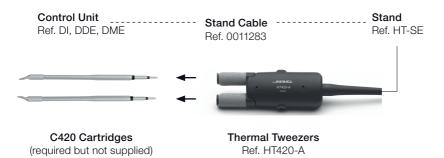


Changing Cartridges

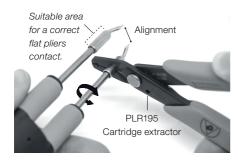

Use a flat pliers in the indicated area for a correct tip alignment.

⚠ Do not over-tighten the cartridge.

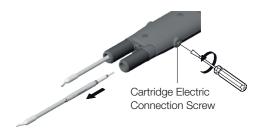

Important: It is esential to insert the cartridge till the end for a good connection.

Take the mark | as reference and check that both tips of the tweezer coincide.


WARNING: It is esential to tighten this screw for the tool to function.




C420 Cartridge Range

Chip Components QFP y PLCC Blade Type C420-271 A = 1,5 mm C420-279 A = 8 mm C420-283 A = 50 mm C420-272 A = 2,6 mm C420-280 A = 11 mm A


Cable stripper

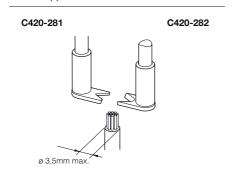

Dual in line

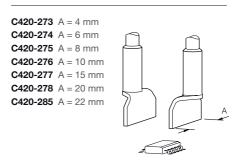


Special Cartridges

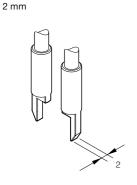

Special Cartridges

A = 12 mm **B** = 15,6 mm **C** = 14,3 mm

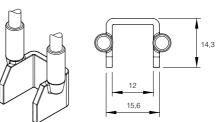

Consult our wide range of cartridges with more than 250 references in **www.jbctools.com**. For Special Cartridges contact with our distributor.

Specifications

- Net Weight: 110 gr (0.24lb)

- Dimensions: 98 x 36 x 21.5 mm (3.85x 1.41 x 8.46 in)

- Cable Lenght:

- Package Weight: 175 gr (0.39 lb)

- Package dimensions: 277 x 73 x 50 (10.91 x 2.87 x 1.97 in)

Complies with CE standards.

FSD safe.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Please register your product warranty within 30 days of purchase in: www.jbctools.com/productregistration.



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.







Manual in other languages available on our website